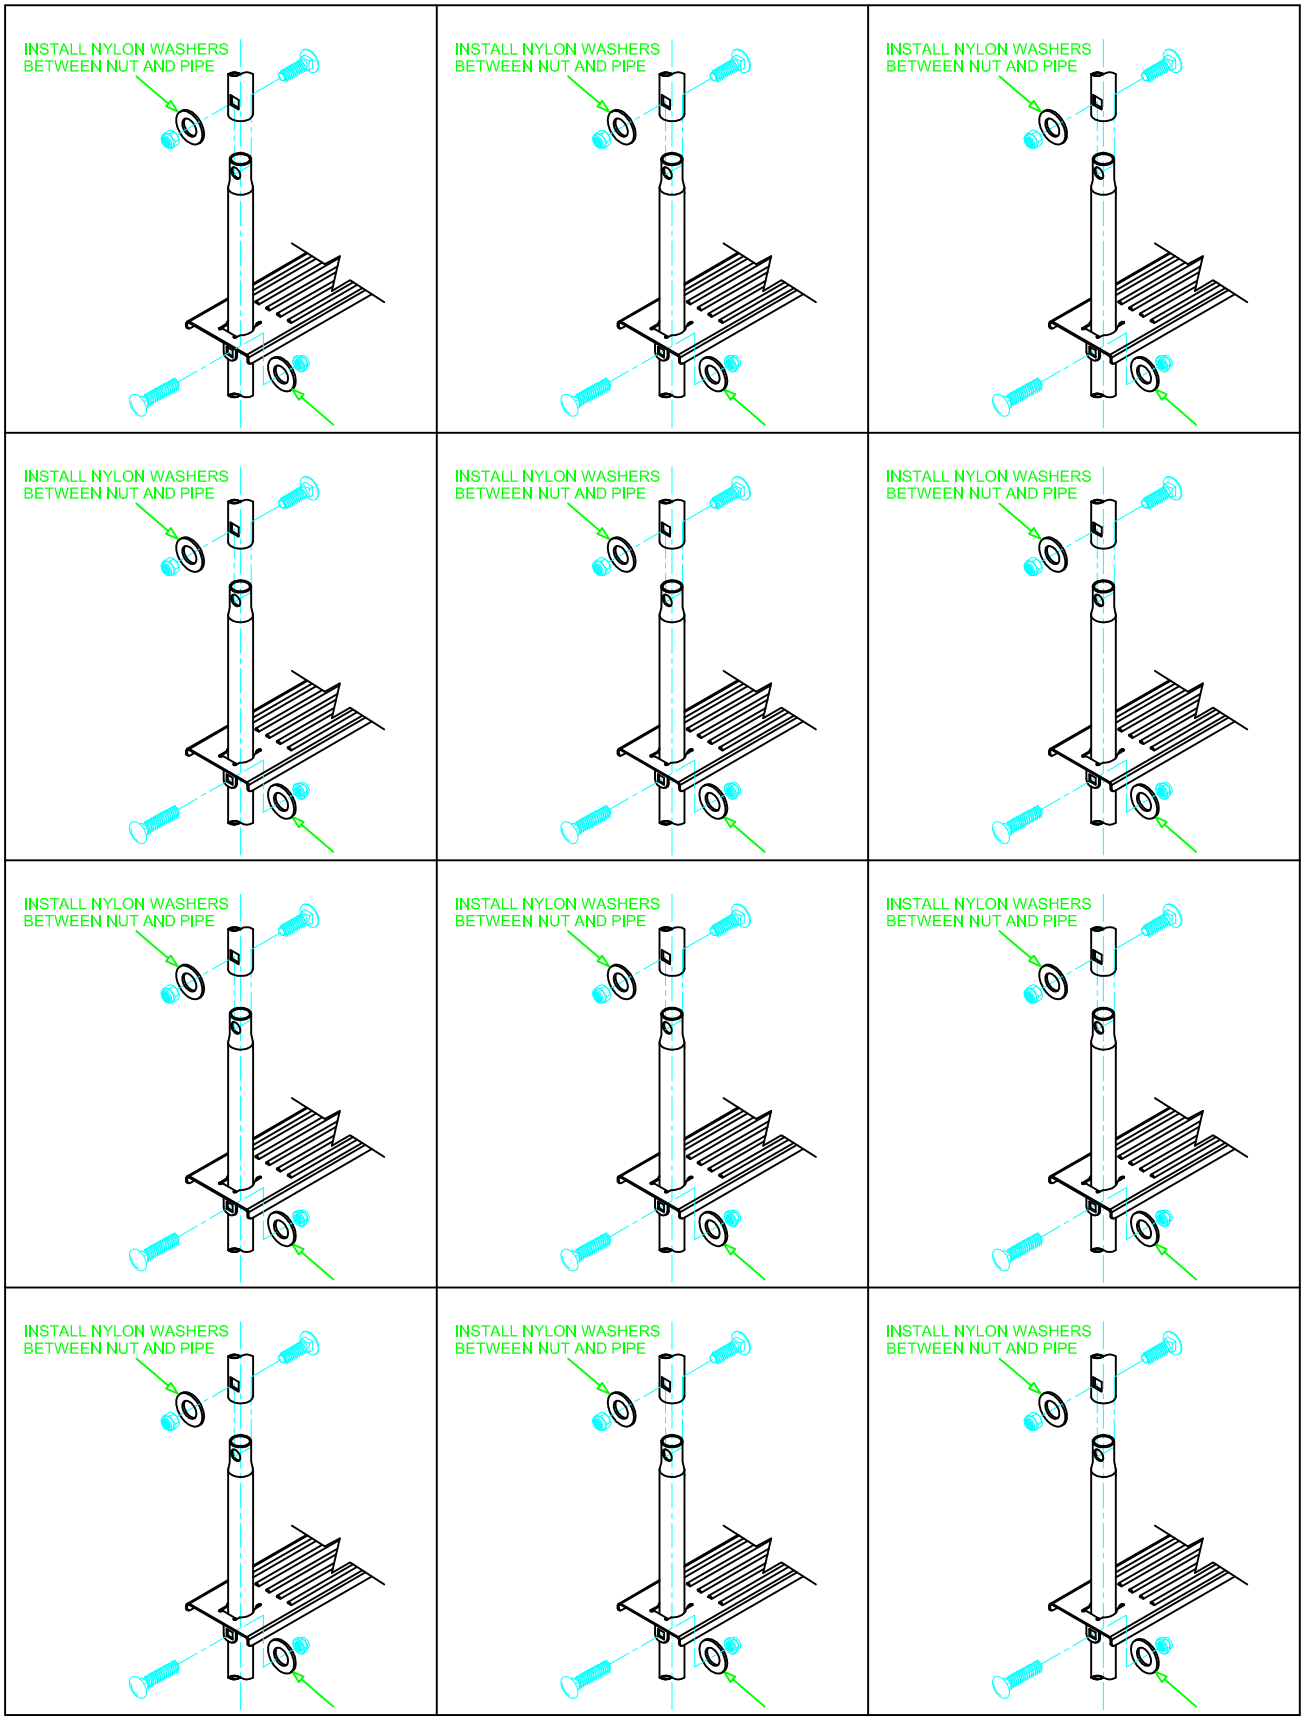
INSTALL NYLON WASHERS
BETWEEN NUT AND PIPE